

hapINES

MIDI Implementation

The 4 instruments can be triggered via Midi notes.

Channel 1 triggers the triangle bass voice, Channel 2 and 3 trigger the square voices.

Channel 4 triggers the drum sounds (via notes 24 to 84)

| Control Change Number | Description |
|--------------------------|---|
| 64 (sustain pedal) | up=slide on. down=slide off |
| 23 | triangle/bass decay |
| 20 | Vibrato speed |
| 12 | Square 1 Vibrato depth |
| 13 | Square 2 Vibrato depth |
| 15 | Square 1 Arp Mode |
| 16 | Square 2 Arp Mode |
| 28 | Square 1 Arp Speed |
| 31 | Square 2 Arp Speed |
| 27 | Noise volume |
| 22 | Noise Bend |
| 40 | Triangle Slide rate |
| 41 | Square 1 Slide rate |
| 42 | Square 2 Slide rate |
| 24 | Square 1 decay |
| 25 | Square 2 decay |
| 29 or mod wheel MIDI CH1 | Square 1 PW |
| 30 or mod wheel MIDI CH2 | Square 2 PW |
| 82 | Vibrato Square1 0=off >0 = on |
| 38 | Vibrato Square2 0=off >0 = on |
| 113 | Arp Square1 0=off >0 = on |
| 83 | Arp Square2 0=off >0 = on |
| 73 | Lock device knobs(recommended for MIDI modulation) 0=off >0 = on |